

## To Open:

1. Unlock the pad lock using the key. Pad lock is located under the black knob. (pad lock does not come out).



2. Lift the black knob to open the lower cabinet.
3. Slide the handle located inside the lower cabinet, to the right, to open upper cabinet.



4. Raise upper cabinet door until the red safety support strut engages.



## **To Close:**

1. Disengage the red safety support strut by pressing on the red tab.
2. Use the black strap to lower the cabinet door until it locks – CAUTION WATCH YOUR HEAD!
3. Close lower cabinet doors ensuring the black knob is in the lowest position. Push black knob down to secure.
4. Press inward on the pad lock until it is locked.